

Tension Fabric Displays

INDEX

PAGE 1 // BEFORE YOU BEGIN

PAGE 2 // TENSION FABRIC DISPLAY SETUP

PAGE 3 // TENSION FABRIC DISPLAY SETUP

PAGE 4 // TENSION FABRIC DISPLAY SETUP


PAGE 5 // FINAL TENSION FABRIC DISPLAY

PAGE 6 // DISPLAY STORAGE AND CARE

Before You Begin

Before you begin to assemble your Tension Fabric Display, make sure you have all of the included product parts. **Note:** Because we offer multiple display sizes, the number of parts will vary based on the size you purchased.


1. Top corner poles
2. Top horizontal pole
3. Vertical shock-corded poles
4. Fabric graphic
5. Horizontal middle pole
6. Base

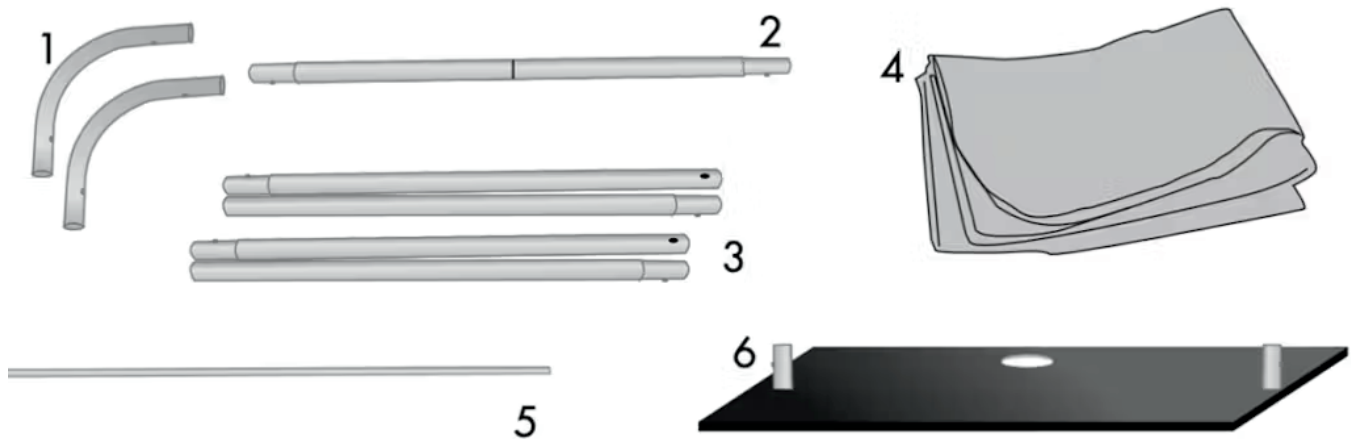

Tension Fabric Display Setup

Step 1: Remove all of the parts from the carry case and place them on a clean, flat surface.

Step 2: Assemble the vertical shock-corded poles by placing the tapered end of one pole into the large end of the next while pressing the snap button, as shown.

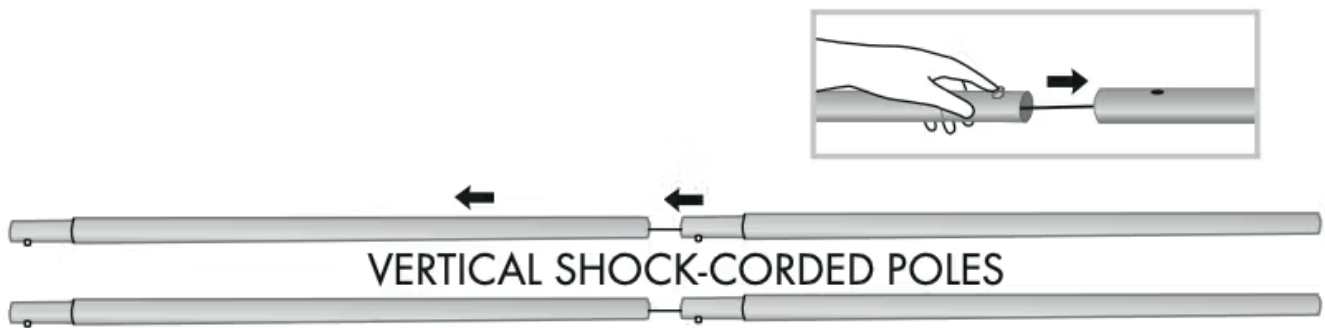


Step 3: Attach the vertical shock-corded poles into the ports on the base, as shown.




Tension Fabric Display Setup

Step 4: Insert the ends of the horizontal middle pole into both sides of the vertical shock-corded poles, as shown.

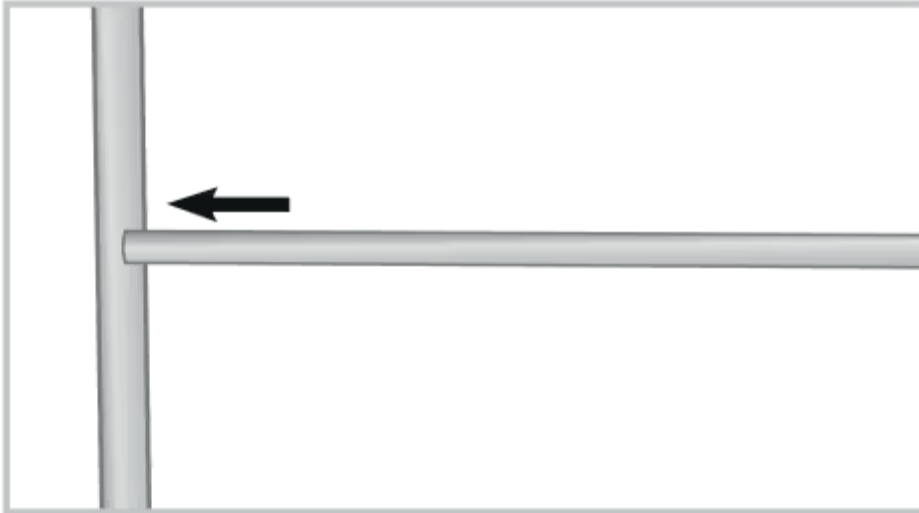


Step 5: Attach the top corner poles and top horizontal pole to the vertical poles, as shown.

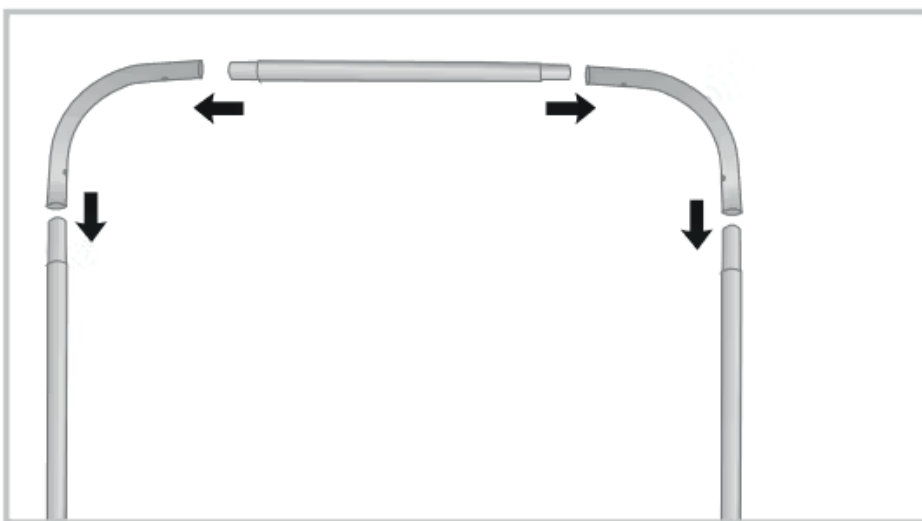

Tension Fabric Display Setup

Step 6: Slide fabric graphic over the top of the display, as shown.

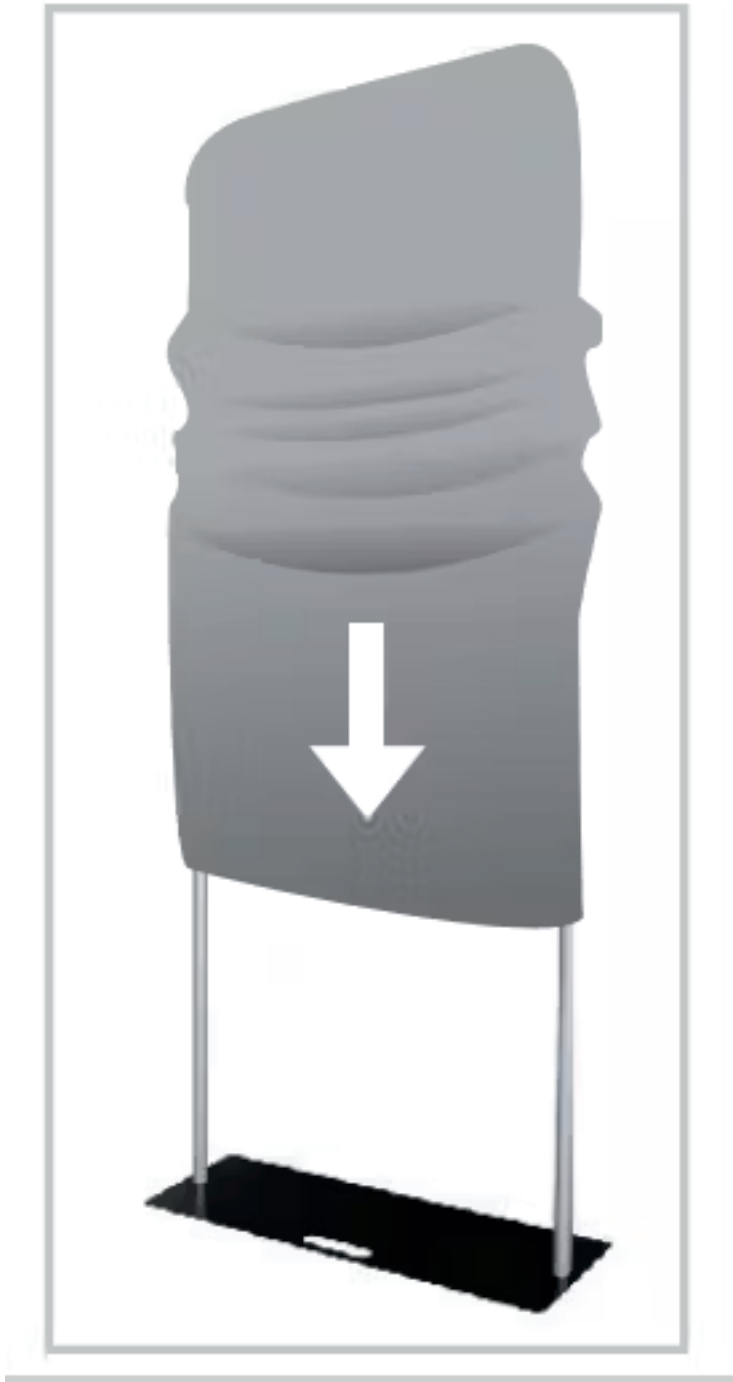

Final Tension Fabric Display



Display Storage and Care

Place all product parts into the carry case and store in a cool dry location. Displays are recommended for indoor use only. Machine wash on gentle cycle using mild detergent. Tumble dry no heat. Do NOT dry clean. Do NOT iron.

